

IDP Entry-Fit™ Steel Door Frames

Prehanging Assembly Instructions K2A and NK2A Series Frames



INTERNATIONAL DOOR PRODUCTS

**IDP Inc
21300 W. 8 Mile Rd.
Southfield, MI 48075
248-352-0044
www.idpframes.com**



INTERNATIONAL DOOR PRODUCTS

IDP Inc. ENTRY-FIT™ STEEL DOOR FRAMES

K2A and NK2A SERIES ADJUSTABLE FRAME PRE-HANG DOOR INSTRUCTIONS




TOOLS REQUIRED

- Safety glasses
- Cordless drill with magnetic holder & #2 phillips bit
- Tape measure
- Utility knife or scissors
- Hammer

**ALWAYS WEAR EYE PROTECTION
WHEN INSTALLING FRAME & DOOR**

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION

K2A and NK2A SERIES JAMB KIT COMPONENTS

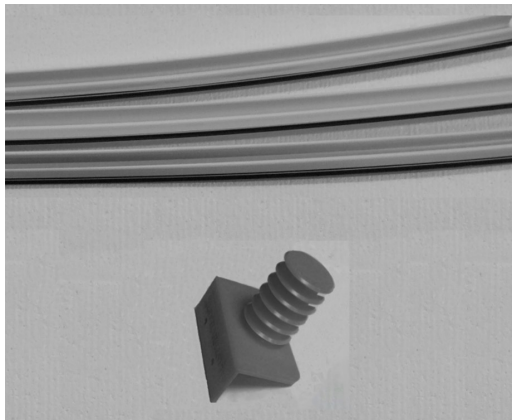

JAMB KIT

- 1 ea. Strike jamb (not shown in pictures)
- 1 ea. Hinge Jamb (not shown in pictures)
- 1 ea. Header (not shown in pictures)
- 1 ea. Sill (not shown in pictures)
- 2 ea. Weather-strip for hinge and strike jamb (K2A Only)
- 1 ea. Weather-strip for header (K2A Only)
- 1 ea. Plastic shipping bracket
- 1 bag Pre-hang fasteners

PRE-HANG FASTENERS



- 4 ea. #8 x 1" Pan Head Screw for ADA Sill (or) #6 x 1 5/8" Drywall Type Bugle Head Screws for Std. Sill (not provided)




- 2 ea. #6 x 1/4" Type F Pan Head Self-Tapping Screw for Pre-hang Bracket



INTERNATIONAL DOOR PRODUCTS


ENTRY-FIT™ STEEL DOOR FRAMES

K2A and NK2A SERIES ADJUSTABLE FRAME PRE-HANG DOOR INSTRUCTIONS

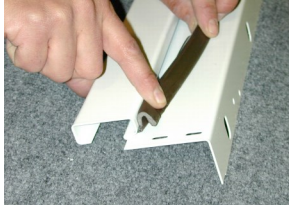


K2A ONLY

1. Align weather-strip, at bottom, 7/8" shorter than jamb for std. sill and 1/2" shorter than jamb for ADA sill, at bottom of frame for no sill, then cut w/s 3/8" short of overall height of frame (not including tabs).

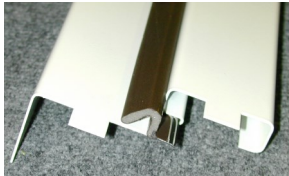


K2A ONLY

2. Install weather-strip 3/8" down from top of jamb by pushing the tang into the kerf in the frame.

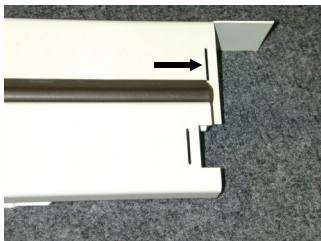

K2A ONLY

3. Push the header weather-strip tang into the kerf of header as shown above, cut w/s to finish even with the inside edge of slot at each end of header, as indicated by the arrow.

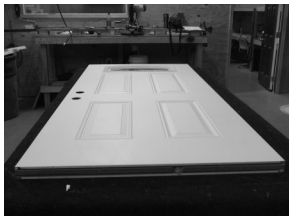


4. Carefully lay door on a flat surface. Raise door approx. 1-5/8" above flat surface with carpeted 2x4's



5. Install door sweep per door manufacturer's instructions.



6. Attach hinges to door with screws recommended by door manufacturer.

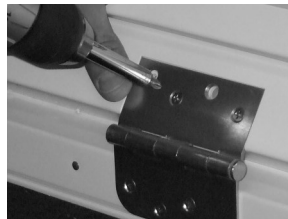

7. Place hinge jamb flange down on door near edge. Attach each hinge to frame with 3) #10-24 Flat Head Under Cut machine screws. Provided with hinges.



8. Rotate hinge jamb down against door edge. Place slots in header over tabs on hinge jamb. Bend tabs outward and flat against header.



9. Insert shipping bracket into latch edge bore in door as shown.



10. Place tabs on strike jamb into slots in header and bend tabs outward, flat against header.



11. Align top of door for even margin to header. Attach shipping bracket to frame with 2) #6 x 1/4" type F pan head self-tapping screws.



12. If installing optional sill, place sill flush to bottom of frame and Attach with 4) #8 x 1" pan head screws for ADA Sill (or) #6 x 5/8" Bugle Head Screws for Std. Sill.